



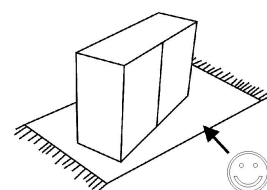
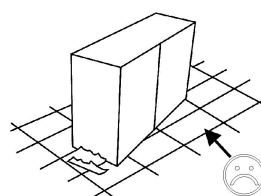
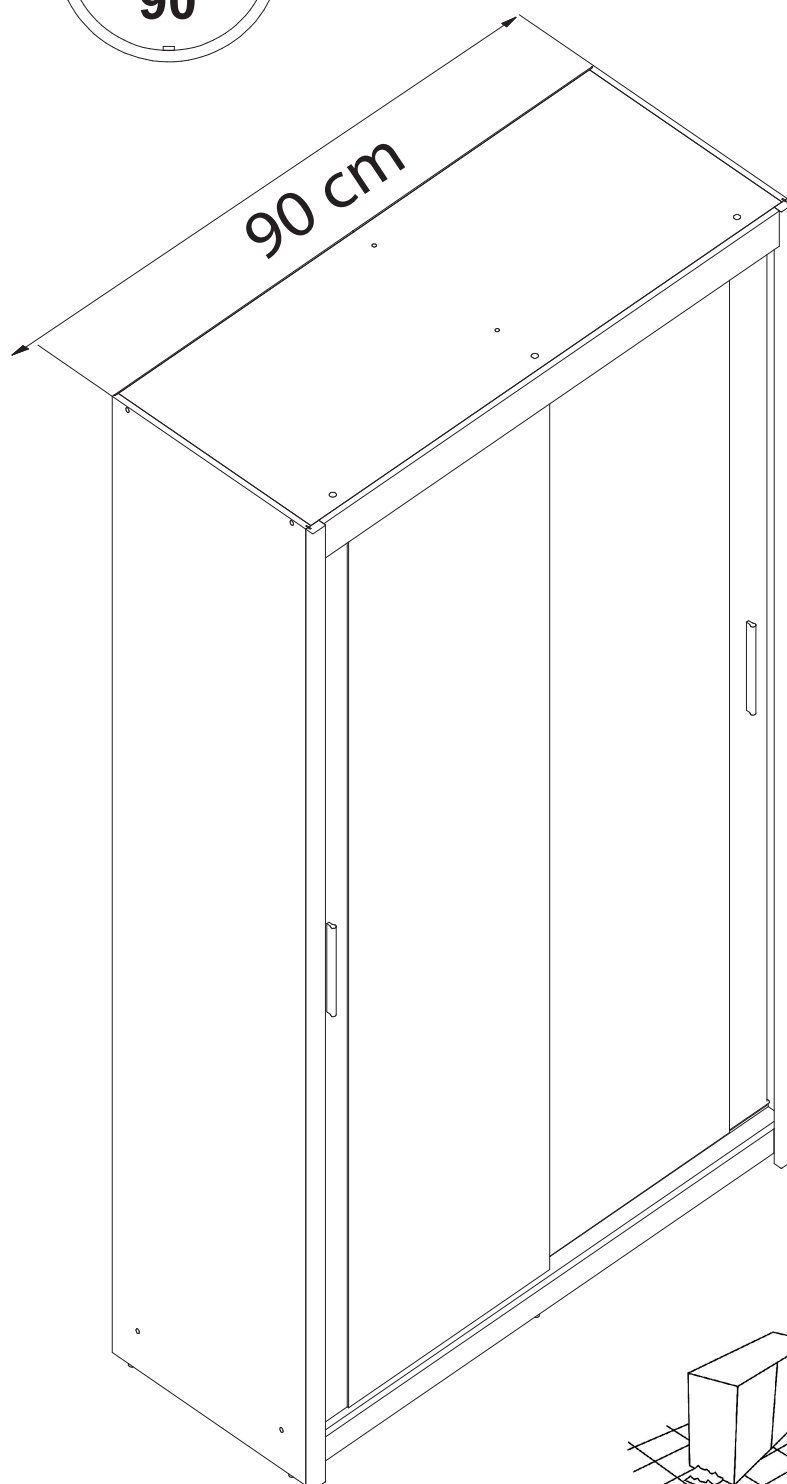
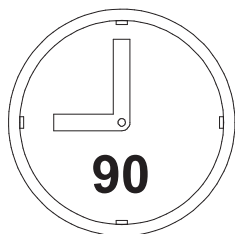
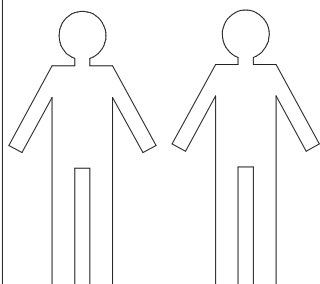
Brno / Petras Wardrobe 90cm

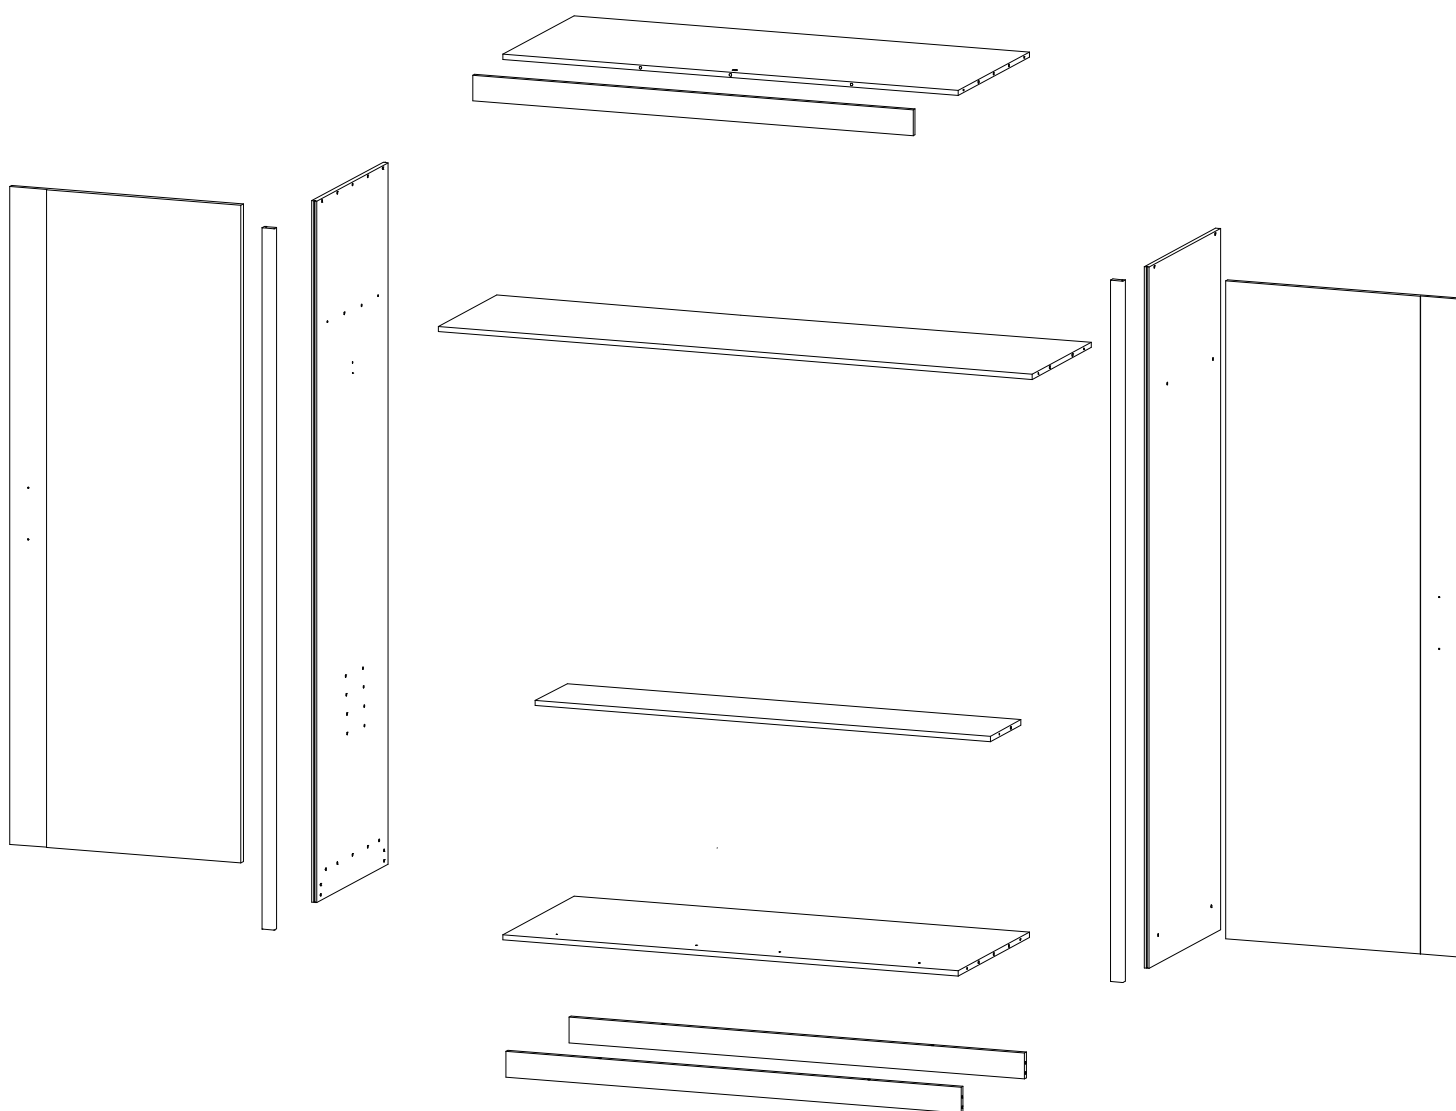
PL - Instrukcja montażu D - Montageanleitung GB - Assembly instructions









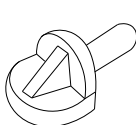
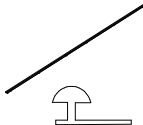


RO - instructiuni de montaj SK - Navod na montaz TR - Montaj tali matu










NL - Handleiding voor de montage IT - Istruzioni di montaggio FR - Notice de montage

CZ - Monta ni navod HU - Szerelesi utmutato RU - инструкция по сборке






A 32 x Ø8x35 	B 1 x Ø15x12 	B1 1 x 34mm 	B2 1 x Ø17 	B3 12 x Ø7x50 	B4 16 x Ø12 
C2 4 x Ø3x25 	A1 10x 	C4 50 x Ø4x16 	C5 60 x 	E 2 x 160mm 	F 1x 720mm 
F1 2 x 	G 4 x 	G1 4 x 	H 4 x 	I 4 x 	J 6 x 
	K 1 x 	C3 16 x Ø3x16 	Z 1 x 	H2 16 x 	

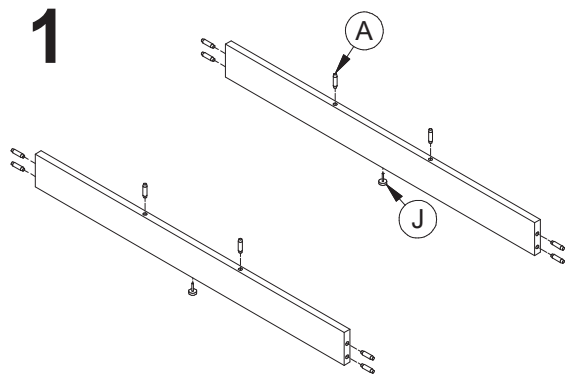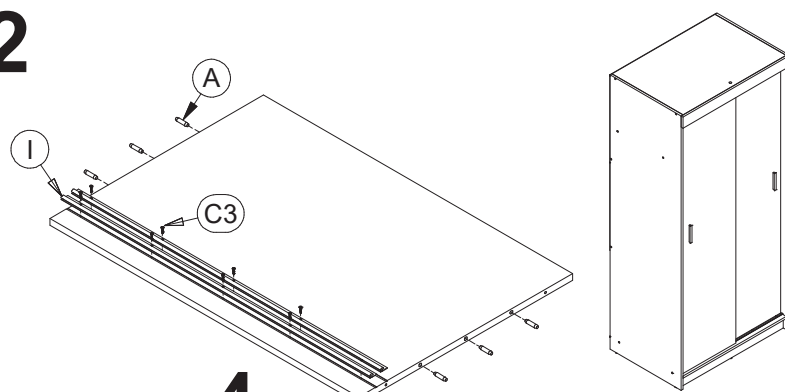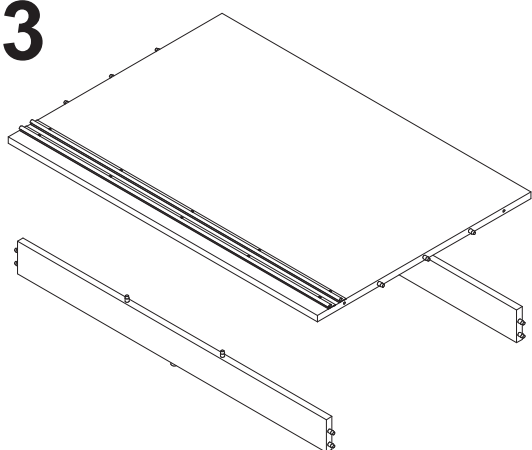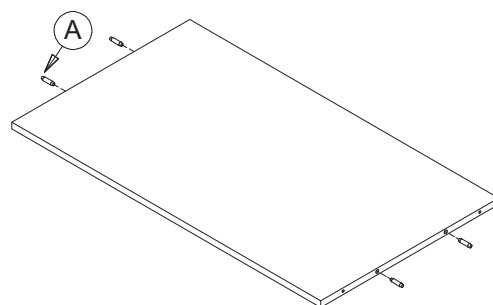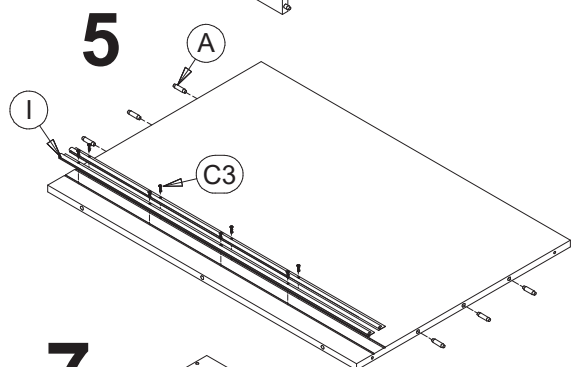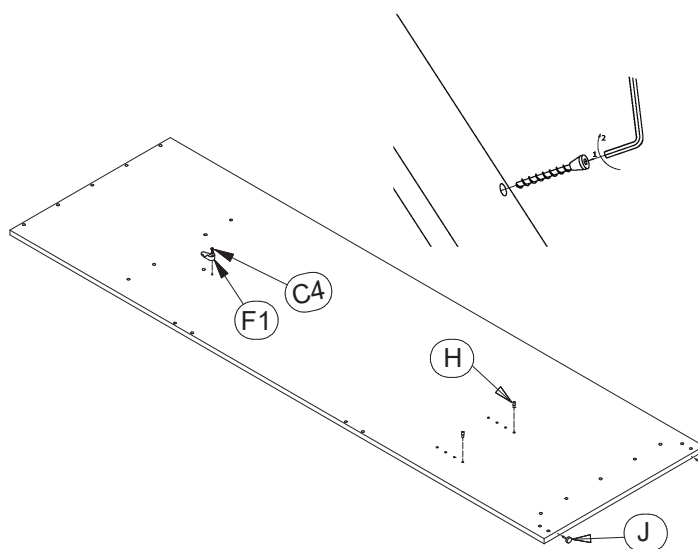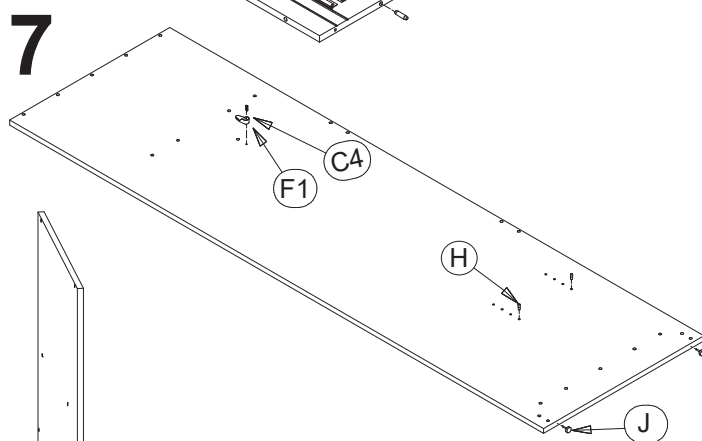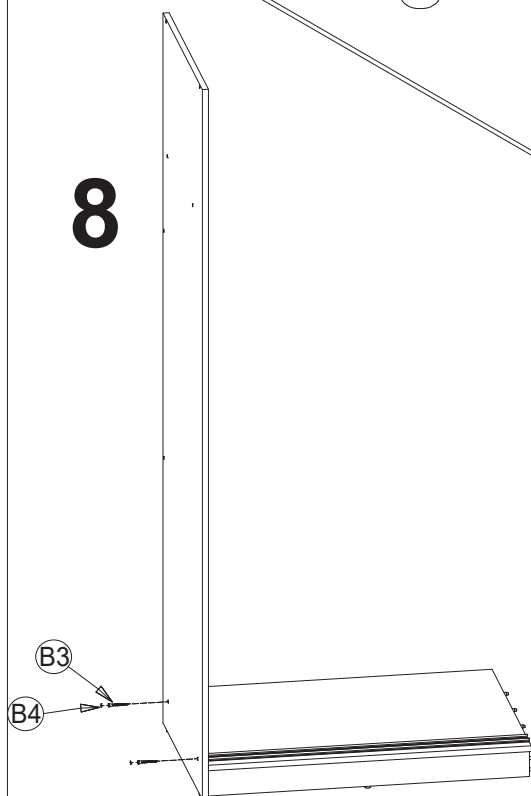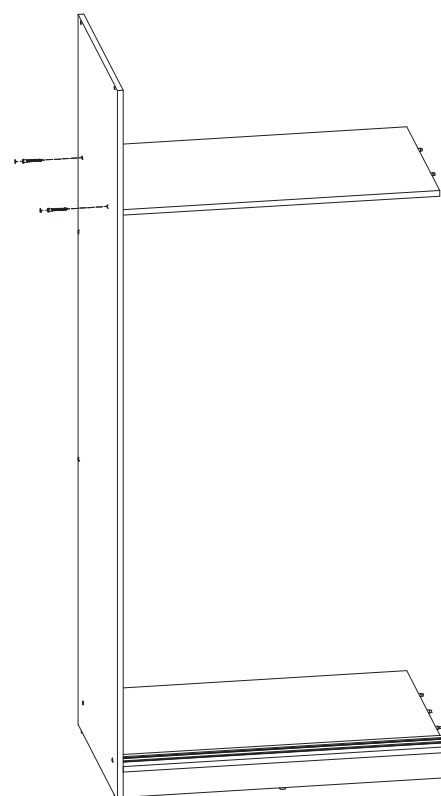
1**2****3****4****5****6****7****8****9**

3 str.


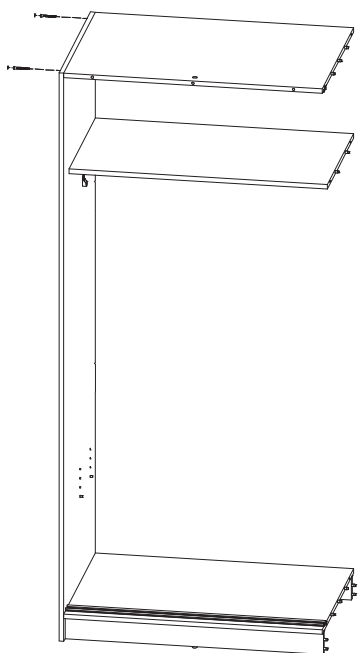
10





11

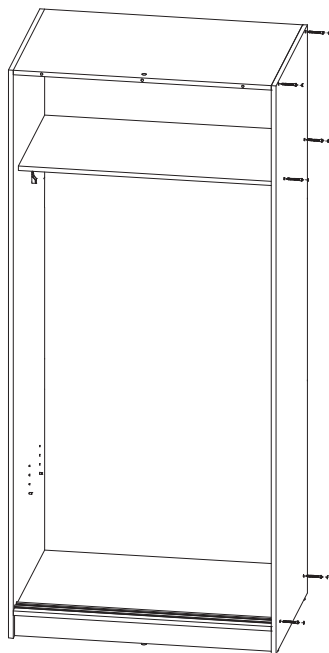


12

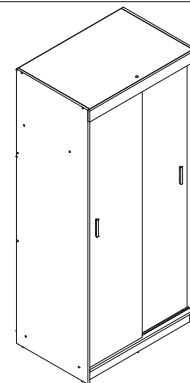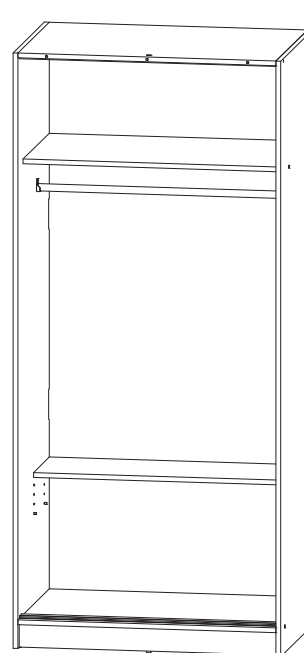


13

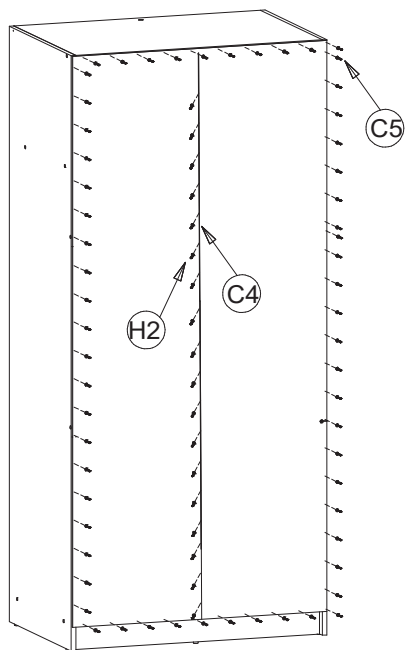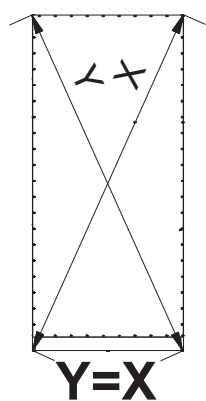


14

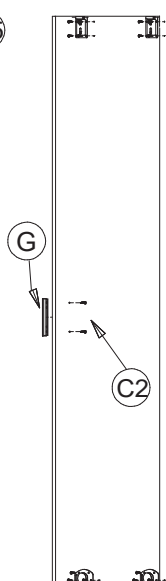


15

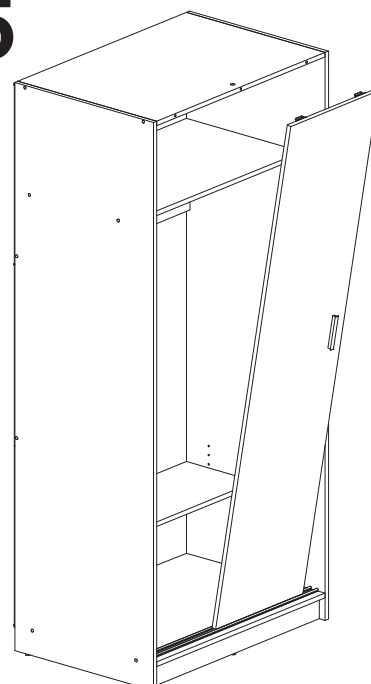

16

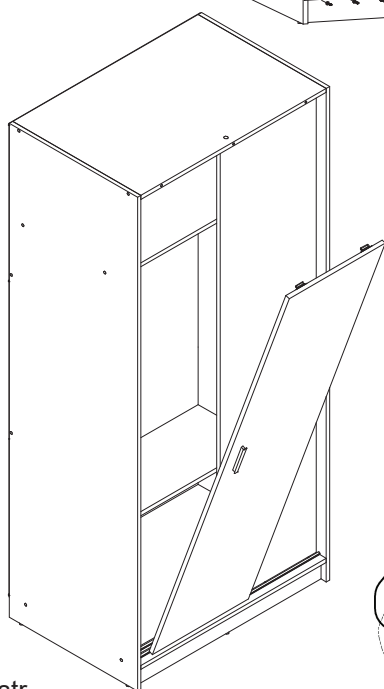

17

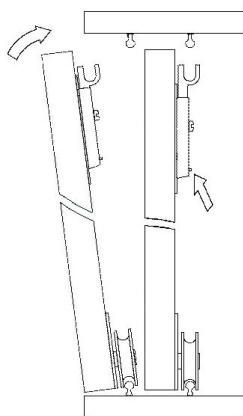

18

